

Part Number: BMW-R12S7-F

Description: Front Saddle

Fitment: 2007 BMW R1200S

Revision: 1



Tools Required	Parts List

1. Remove the stock seat(s) from your bike.
2. Front saddle installs like stock and uses the BMW key lock system. Brackets are included and come pre-mounted on the saddle. To install, slide the two rear brackets on the saddle under the hooks on the chassis, align the Corbin latch bracket on the saddle to the stock locking mechanism and push down until you hear it click. *(Figure 1)*
3. To remove seat, use the stock key to release.

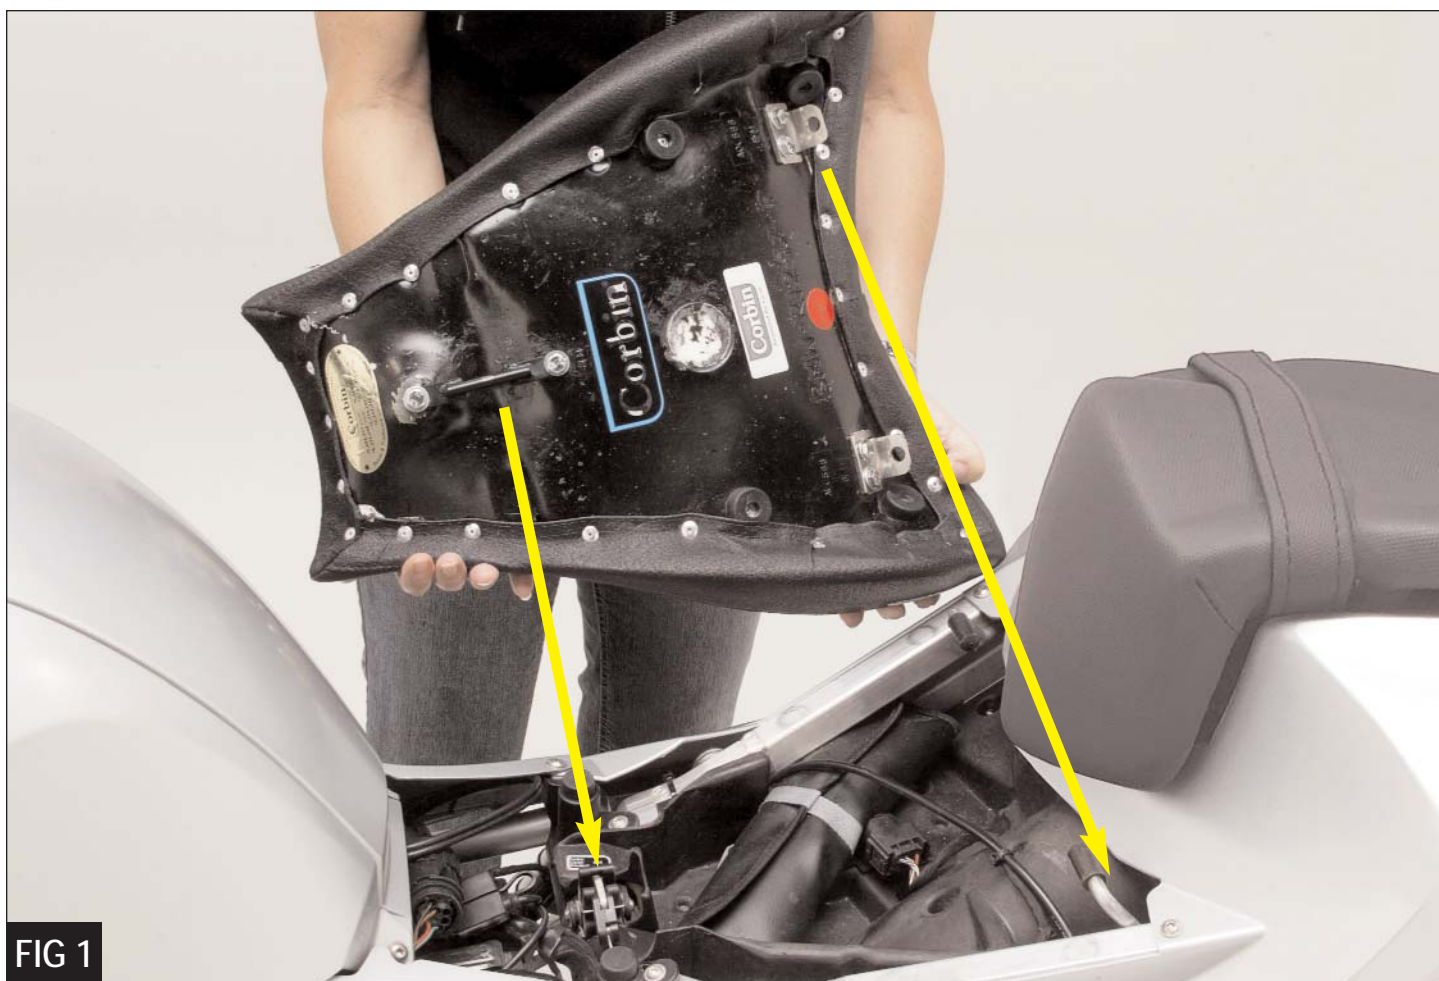


FIG 1

Questions? Give us a holler...

800-223-4332
tech@corbin.com