

**Part Number:** D-MULTI-15(E)

**Description:** Canyon Dual Sport Saddle

**Fitment:** 2015 Ducati Multistrada 1200S

**Revision:** 1

**Corbin**

Tools Required	Parts List
4mm Allen key	1 #CB-PWR-HRN-36=12" Wiring Harness / pigtail 1 #FACC-05 Small Fuse Adapter 2 8" zip ties

1. Begin by removing the stock seat (refer to owner's manual).
2. Saddle mounts just like stock with brackets preinstalled on the saddle.
3. To install your Canyon Dual Sport saddle, slip the two front tongues of your saddle under the rear of the gas tank, align the Corbin locking pin to the stock locking mechanism and push down on the saddle until you hear the lock click.  
*(Figure 1)*

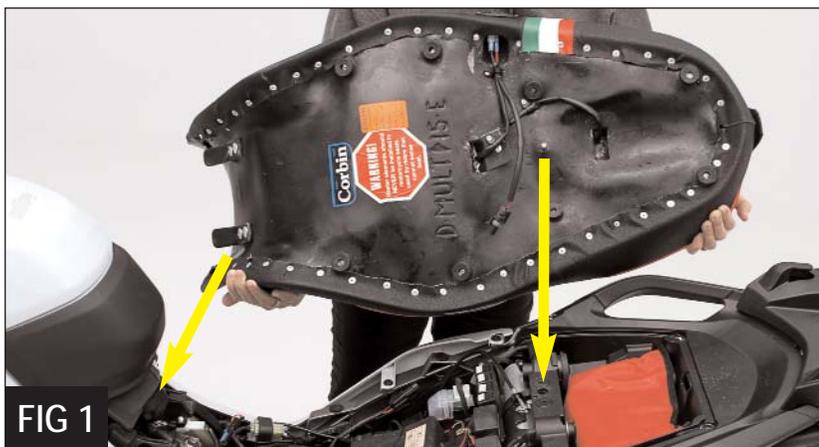


FIG 1

#### HEATER INSTALLATION:

1. If you ordered the heated model, we also included a wiring pigtail that hooks into your stock fusebox, so start by removing the fusebox cover.
2. Remove the 10 amp fuse from the ACCESSORIES position and insert the fuse into the adapter at the end of the wiring pigtail  
*(Figure 2).*
3. Insert the adapter into the fusebox in the space previously occupied by the Accessory fuse  
*(Figure 3).*
4. Remove the eccentric using a 4mm Allen wrench *(Figure 4).*
5. Place the ground wire under the eccentric and through the Allen bolt *(Figure 5).* Secure back into place.



FIG 2





FIG 3

6. Connect wiring adapters together (Figure 6).

7. Secure the negative ground wire to the wiring harness with the included zip ties (Figure 7). Do not tighten excessively or you may damage the wiring... just secure it in place for cleanliness. Trim zip tie.

8. Plug in and test. To do this, just plug the pigtail into the seat, turn on your ignition switch and flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

9. Proceed with saddle mounting as outlined above.

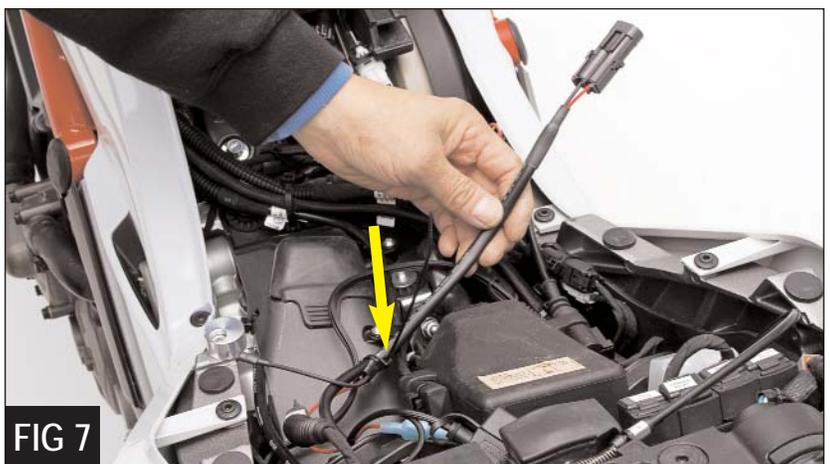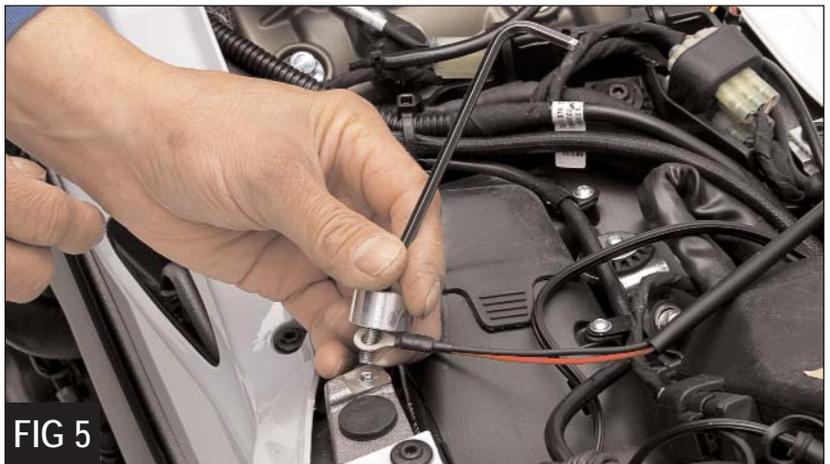

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com