

**Part Number:** HD-FXD-4-BAG

**Description:** Beetle Bags

**Fitment:** 2004-2005 Harley-Davidson Dyna-Glide


**Revision:** 1




Tools Required	Parts List
Phillips Head screwdriver T-45 Torx head wrench 9/16" Socket or Combination wrench 1/2" Wrench Pick	2 #A00760 & #A00761 Bag Mounting Brackets 2 5/16" x 18 x 1 1/4" Hex Head Bolts 2 5/16" Washers 6 3/8" x 16 Chrome Acorn Nuts 14 3/8" x 16 Flat Washers 6 3/8" x 16 Lock Washers 2 3/8" x 16 x 3" Hex Head Bolts 2 3/8" x 16 Nuts 2 Wiring Pigtails

**NOTE:** We recommend the use of a threadlock product like Loctite® when assembling parts on your motorcycle.


1. Remove the tail light cover (two phillips head screws).
2. Unplug the wires from the turn signal and the tail light housing.
3. Working on one side at a time, remove front and rear bolt on the fender strut with T-45 torx wrench. Pull strut away then remove the turn signal using a 1/2" open wrench. Unhook the wires from the plastic plug by first opening the secondary lock. Second insert a pick into the cavity on mating end of connector. Third, pivot end of pick to release tang and fourth, gently tug on wire to remove terminal from the housing. (Figure 2)
4. Next install the turn signal to the saddle bags.
5. Start by inserting the turn signal wires through the bag stand off spacer on the saddle bag (Figure 3). Use the supplied 5/16" hex head bolt and flat washer to secure the turn signal housing. Tighten to 8 ft. lbs. Reinstall the plastic plug.
6. Next install the supplied 3/8" x 16 x 3" hex head bolts and 3/8" flat washers through the inside fender and out through the fender strut. (Figure 4)

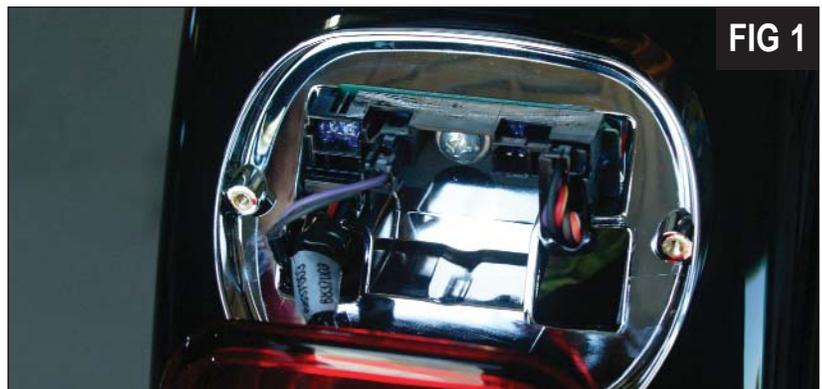

**FIG 1**

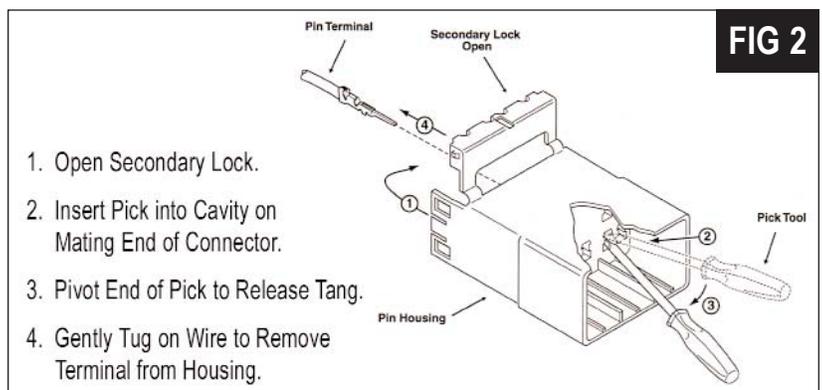

**FIG 2**

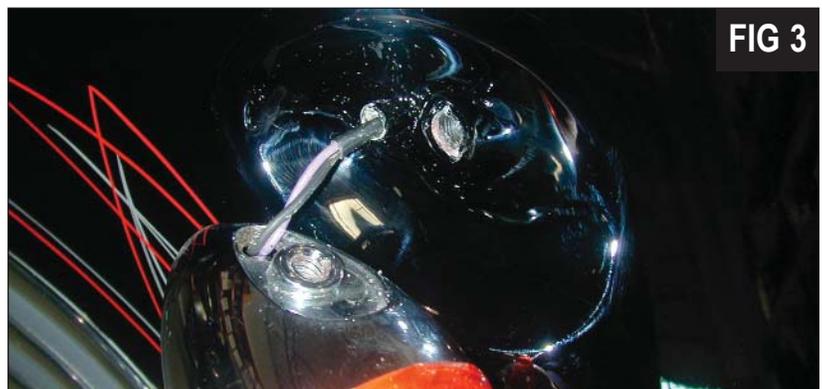

**FIG 3**

7. Install Corbin's bag mounting bracket onto the bolts on the fender strut and secure with the supplied 3/8" flat washer and 3/8" x 16 nut. Tighten the brackets to 15 ft. lbs. using a 9/16" socket wrench. Don't forget to use Loctite®. (Figure 5)

**NOTE:** If using a bolt on sissy bar or a Corbin trunk box, install uprights in normal position. Secure along with corbin bracket and bolts.

8. Route the supplied wire harness through the strut and fender, then through the tail light.

9. Mount the bag onto the threaded studs (two at the fender strut and one located on the lower part of the bracket) Figure 6.

10. Secure the saddlebag onto the studs by using the supplied flat washer, lock washer and chrome acorn nut. Use Loctite® and tighten to 8 ft. lbs. (Figure 7)

11. Plug in the turn signal connectors just as it was removed.

12. Repeat for the other side of the bike.

13. Assure all bolts have been tighten and go enjoy the ride.



FIG 4

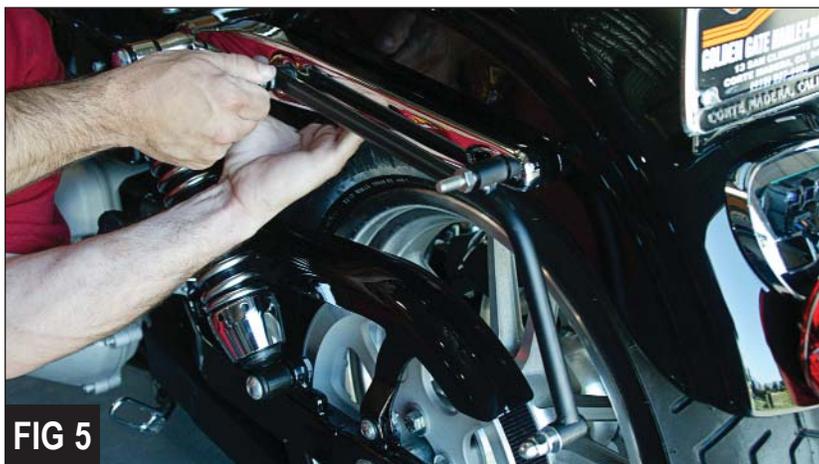


FIG 5



FIG 6



FIG 7

Questions? Give us a holler...  
**800-223-4332**  
**tech@corbin.com**