

Part Number: HD-FXD-6-SMUG-F & HD-FXD-6-WBTAIL

Description: Front Saddle & Tail with RWD Plate Frame

Fitment: 2006-2012 Harley-Davidson Dyna-Glide

Revision: 1



Tools Required	Parts List
3/4" open wrench 5/32" Allen wrench 2 7/16" open wrenches T-45 torx socket wrench combination 1/2" open wrench Phillips screwdriver	1 ABS Inner fender 2 1/2" x 13 x 1/4" hex head bolts 2 1/2" x 13 x 1" hex head bolts 4 1/2" flat washers 2 1/4" x 20 x 1/2" chrome buttonhead Allen bolts 3 1/4" flat washers 1 #SP10114 Single latch pin 1 #P00545 Nylon cap 1 #SP00123 Nylock nut

NOTE: We recommend the use of a thread lock product such as Loctite[®] when assembling parts on your bike.

1. Unplug fender wiring under the seat. *(Figure 1)*



2. Uncap the wires from under the fender and then unplug the turn signals. *(Figure 2)*



3. Remove the turn signal bolt from the inside of the fender, using a 1/2" open wrench *(Figure 3)*. Then remove the turn signal from the fender.

4. Remove the front bolt on the fender, using a T-45 torx wrench. The big washer comes out with it. *(Figure 4)*

NOTE: Inside fender nuts (bracket with inserts), will fall out *(Figure 5)*.

5. Repeat on the other side.

6. Remove the fender.

7. Plug in the adapter included with the license plate kit *(Figure 6)*.



8. Tape up the connectors that won't be needed (*Figure 7*).

9. Install the provided latch pin, nylon cap and flat washer onto the frame and secure with a nylock nut (*Figure 8*).



10. Install the inner fender to the smuggler with the provided chrome buttonhead Allen bolts and flat washers (*Figure 9*).

11. Position the smuggler trunk onto the frame and secure with the 1¼" hex head bolts and flat washers in the front position and the 1" hex head bolts and flat washers in the rear position (*Figure 10*).

NOTE: The front bolt and flat washer also secures the inner fender. Slip bolt through the inner fender, then frame, then screw the bolt onto the smuggler box.

12. Route the tail light assembly wires under the frame, then plug it into the pigtail (*Figure 11*).

13. Install your Corbin seat by sliding the front tongue into the base of the gas tank and then lower the rear onto the latch pin and push down.

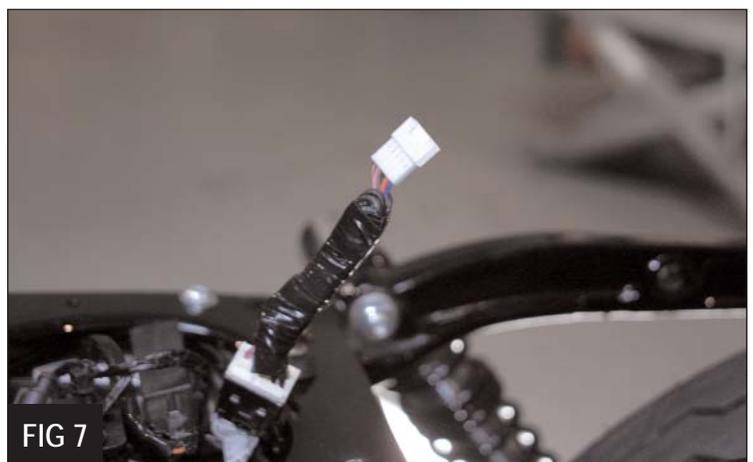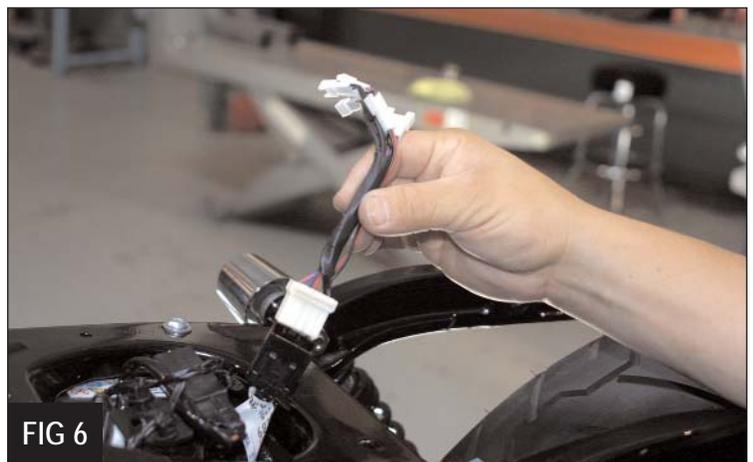

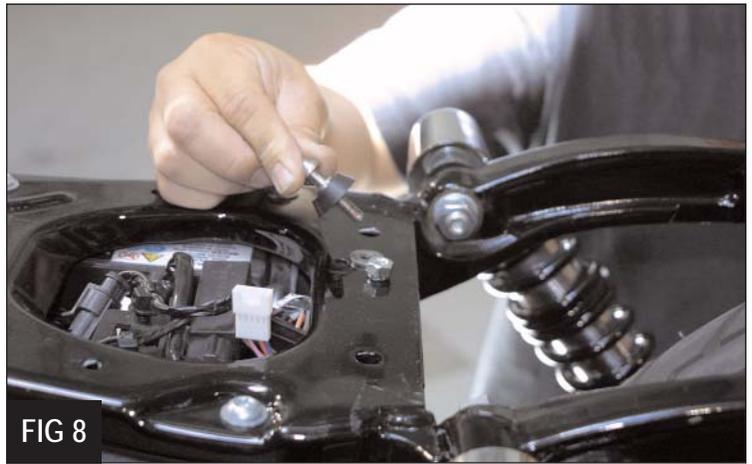


FIG 8



FIG 9

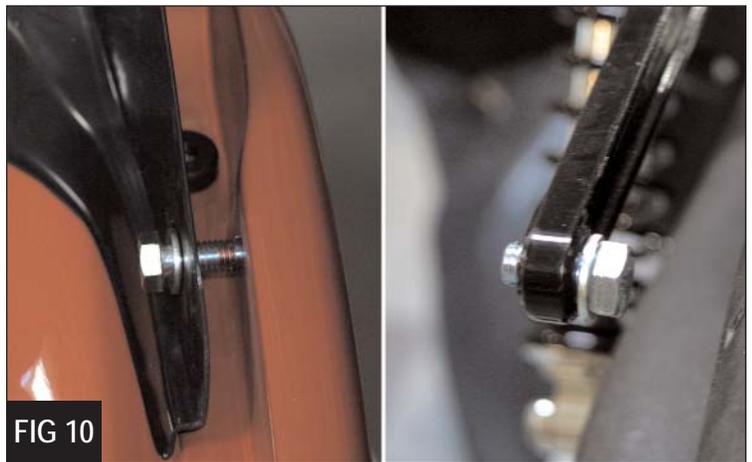


FIG 10



FIG 11

Questions? Give us a call!
800-223-4332
daytona@corbin.com