

Part Number: KTM-1190-A(E)

Description: Canyon Dual Sport Saddle

Fitment: 2014-2017 KTM 1190 Adventure

Revision: 1





Tools Required	Parts List

Saddle mounts to your KTM just like stock with brackets preinstalled on the Corbin seats.

1. Remove stock seat.
2. To install the Corbin saddle, simply slide the saddle into place nose first to engage the tongues and lower the rear into place. Push firmly on the passenger platform to latch. (Figure 1)

HEATER INSTALLATION:

1. Install your heated seat by first plugging the connectors on the Corbin seat to the connectors on the bike (Figure 2 & 3), then test the switch for proper function.
2. Proceed with saddle mounting as outlined above.
3. To release use the stock key.

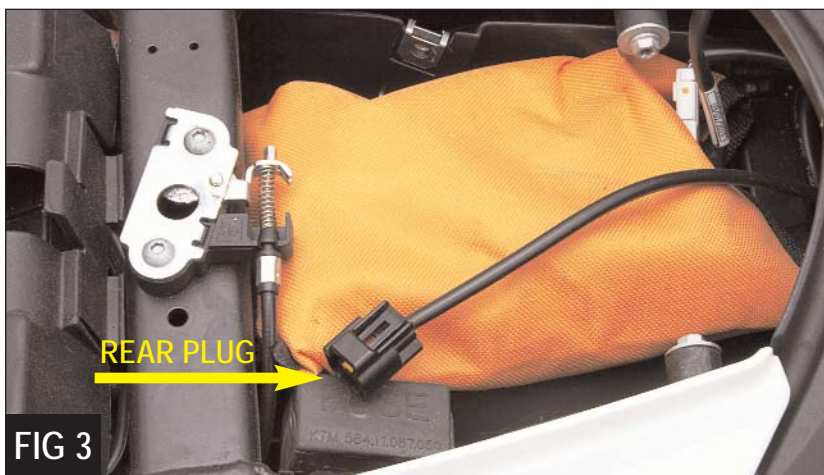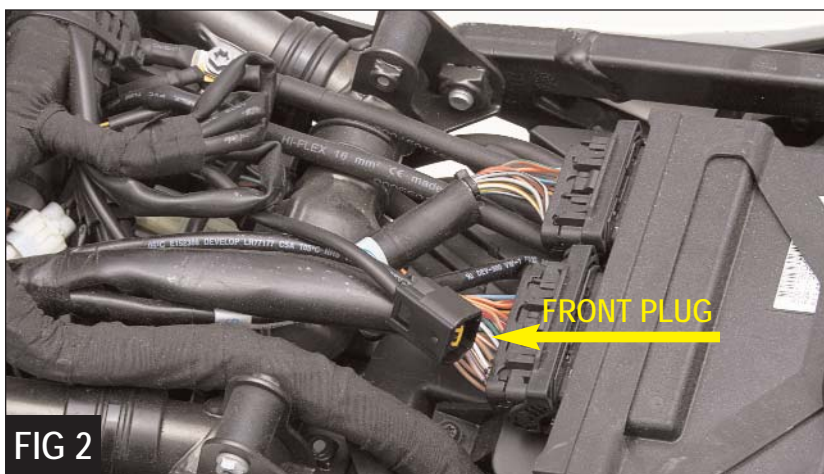

Questions? Give us a holler...
800-223-4332
tech@corbin.com