

**Part Number:** RE

**Description:** Solo Saddle

**Fitment:** 2011 Royal Enfield C5

**Revision:** 1



| Tools Required  | Parts List |
|---|------------|
| 12mm socket ratchet wrench (deep is better)<br>6" extension<br>13mm open wrench<br>17mm open wrench |            |

1. Begin by removing your stock seat. To do this, you need to remove the hex head bolt under the seat (*Figure 1*), using a 6" extension and 12mm socket wrench.

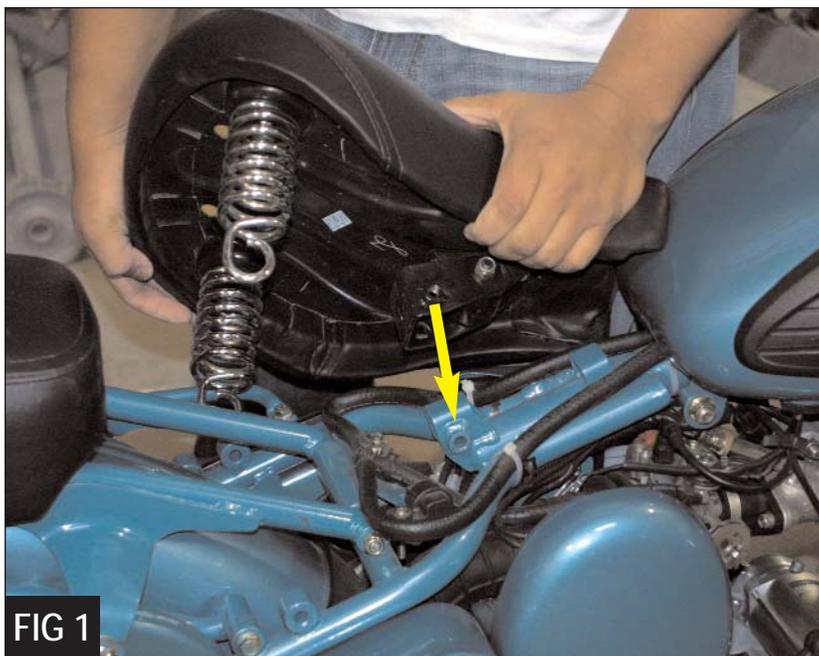


FIG 1

2. Next, remove the bolt holding the spring by using a 13mm open wrench on the back of the bolt and a 12mm socket on the front (*Figure 2*). Set the bolts and washers aside.

3. Repeat on the other side.

4. Lift up front seat and remove.

5. If your Royal Enfield has the optional passenger seat, use a 17mm open wrench to loosen the acorn nuts (*Figure 3*).



FIG 2

6. Take a 12mm socket wrench and a 13 mm open wrench to remove the bolt in the center (*Figure 4*).

**NOTE:** Hold onto the sissybar while taking out the bolt, so the rear seat doesn't rock back and hit the fender and damage the paint (*Figure 5*).

7. Slide out seat and remove.

8. Install the Corbin seat by slipping the front tongue into the base of the gas tank, lower the seat so the U-shaped brackets drop straight down into the shock bolts. Secure with the stock acorn nuts with a 17mm open wrench (*Figure 6*).



Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com