

Part Number: SB-1250-7-BAG

Description: Beetle Bags

Fitment: 2007-2008 Suzuki Bandit 1250

Revision: 1



Tool Required	Parts List
6mm Allen key 3/16" Allen Key 12mm Socket wrench 10mm Open wrench 12mm Open wrench 9/16" Open wrench 5/8" Open wrench #2 Phillips Screwdriver	1 #A01005 rear support bracket 2 #A01006 side support bracket 1 #A00304 right muffler bracket 1 #P10188 aluminum spacer 2 #P00114 stainless steel studs 4 3/8" chrome acorn nuts 2 3/8" x 16 x 1 1/4" zinc hex head bolts 1 3/8" x 16 x 1" zinc hex head bolt 1 5/6" chrome flat washer 1 black plastic spacer 1 5/16" x 18 x 1 1/4" chrome button head Allen screw 2 6mm flat washer 2 6mm x 1 hex head screws 7 3/8" lock washers 7 3/8" flat washers

NOTE: We highly recommend using a medium strength thread lock product, such as Loctite® on all of the bolts when installing your Corbin Beetle Bags.

1. Start by replacing the left side and right side rear allen bolts on the hand rail with the supplied double sided studs (#P00114) and reusing the stock washer (*Figure 1*). Use Loctite® and tighten to 10 ft. lbs.



FIG 1

2. Next install the supplied rear mounting bracket (#A01005). Start by removing the license plate frame, using a 10mm open wrench and a #2 phillips screwdriver. Remove the screws and the nuts holding the bracket and replace the screws with the supplied 6mm hex head bolts and flat washers. Replace the nuts with the rear mounting bracket (*Figure 2*). Tighten them down to 10 ft. lbs. and don't forget to use Loctite®.



FIG 2

NOTE: Make sure the threaded holes on the rear mounting bracket are facing up (*Figure 2*).

3. Now you are ready to install the side support brackets (#A01006). Start by removing the two Allen bolts on the footpeg mounting bracket, using a 6mm Allen key. Slide the Corbin mounting bracket in between the footpeg mounting bracket and the bikes frame and secure with the stock bolts (*Figure 3*). Use Loctite® and only hand tighten them for now. Repeat on the other side.

4. To install the side bracket (#A00304), remove the nut holding the exhaust pipe to the footpeg mounting bracket. Slide the Corbin side bracket in place and secure it by reusing the stock nut. Snug in place, but do not tighten yet. Don't forget to use Loctite®.

NOTE: The nut on the bracket should be facing up and should be parallel to the ground as a guide for best position location (Figure 4).

5. Now you are ready to install the right side bag. You will need to be a bit careful and watch the footpeg mounting bracket as it can scratch the paint surface as you are sliding the bag onto its four mounting locations. It would be a good idea to lay a soft rag over it until you get the bag in place. Once you have the bag in place, secure the bag by using the supplied 3/8" acorn nuts, flat washers and lock washers on the top and bottom rear of the bag, a 3/8" x 16 x 1" hex bolt, lock washer and flat washer on the front bottom location (where the exhaust is), and a 3/8" x 16 x 1 1/4" hex bolt, lock washer and flat washer on the top front side of the bag (Figure 5).

NOTE: Once you get all the bolts started, you will need to go back and tighten the footpeg brackets and the footpeg exhaust bracket to 10 ft. lbs. Then tighten the bolts and nuts inside the bag to 8 ft. lbs.

6. To install the left bag, repeat everything you did on the right side except for the front bottom mounting location. This location bolts on a little different. Once you slide the bag in place, get all the bolts and nuts started, snug enough to hold the bag in place, but loose enough to let you move it around a bit. Next slide the supplied aluminum spacer in between the bag and the footpeg mounting bracket, then secure it in place with the supplied 5/16" x 18 x 1 1/4" chrome button head Allen bolt, nylon washer and flat chrome washer (Figure 6). Tighten this bolt to 8 ft. lbs.

7. Next, go back and tighten the footpeg bracket to 10 ft. lbs. and the bolts and nuts inside the bag to 8 ft. lbs.

BAG AND SEAT INFORMATION: The left saddlebag has a 1" hole to have access to the seat release lock. Slide the key through the hole to release the seat.

Questions? Give us a holler...
800-223-4332
tech@corbin.com



FIG 3



FIG 4

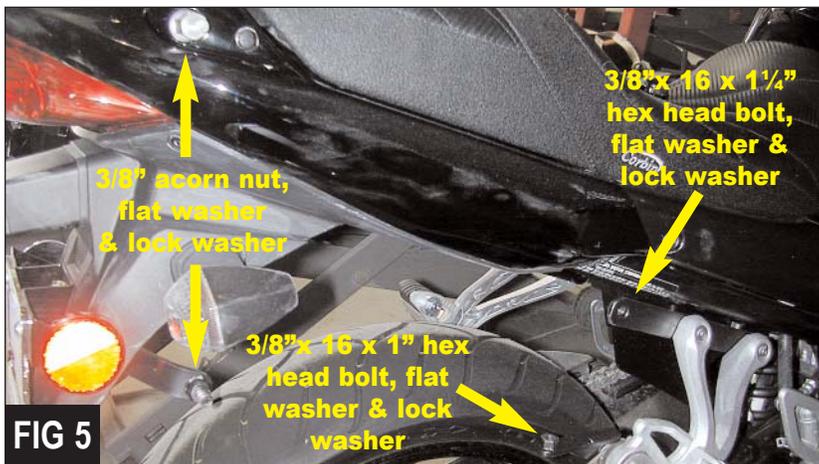


FIG 5



FIG 6