

Part Number: T-R-3-BAG

Description: Beetle Bags

Fitment: 2004+ Triumph Rocket III & Triumph Rocket Roadster

Revision: 3



Tools Required	Parts List
9/16" Deep socket or combination wrench 5/8" Deep socket or combination wrench 1/2" Socket 1/2" Combination wrench Pick or small screwdriver Pliers	1 Lower bag bracket, Left (Figure 1, A) #A00617 1 Lower bag bracket, Right (Figure 1, B) #A00619 4 3/8" x 16 Chrome Acorn nuts 6 Each, 3/8" split lock washers & flat washers 2 Long stainless steel studs #P00851 2 Short stainless steel studs #P00850 4 1/4" spacers (For Triumph Roadster) 2 3/8" x 16 x 3/4" hex head cap screws 2 5/16" x 24 x 2 hex head cap screws 2 5/16" x 24 Nylock nuts 2 5/16" flat washers

NOTE: We recommend the use of a thread lock product such as Loctite® when assembling parts on your motorcycle.

1. Congratulations on your new bags, you're going to love them. Please take a moment to familiarize yourself with the installation procedure by reading this entire document before you begin. This could save you time in the long run.

2. Let's start with the lower bag mount brackets, *Figure 1*, A & B. Each bracket is stamped L or R to indicate which side it mounts on. If you cannot make out the stamping, refer to the image.

3. These two brackets will attach to the passenger footpeg mount on each side of the bike as shown in *Figure 2*. Simply remove the pin that currently holds the footpeg in place and set aside (use a pick or small screwdriver to remove the e-clip on the end of the pin to remove). You will be replacing it with the included shoulder bolt with flat washer and nylock nut. Tighten securely to approx. 8 ft lbs.

4. On the back side of the peg hanger, you will secure the lower mount to your bike with the stock bolt as shown in *Figure 3* with the white arrow. Be sure to use some Loctite on this bolt and tighten to 8 ft lbs.

5. Remove the socket head screws from the fender rails and replace with the included stainless steel studs as shown in *Figure 4*. Leave the stock washers in place and reuse them with the Corbin studs. There are two different length studs include with your installation kit. The Short ones will be used in the rear position while the long ones will be used in the Front position.



FIG 1



FIG 2

NOTE: If you have the Triumph Rocket Roadster, then you will need to add the supplied 1/4" spacers to each of the studs (*Figure 5*).

6. Tighten the studs securely to 10 ft lbs. and apply some Loctite.

7. There are now three mounting positions for each bag on your motorcycle. Simply slide the bag into position onto the studs you have installed in the fender rails and align the hole in the bottom of the bag with the lower bracket. See *Figure 6*.

8. Secure the bag with the 3/8" chrome acorn nuts at the top. Use a flat washer followed by a lock washer and then the acorn nut. Apply a little Loctite and tighten to 8 ft lbs.

9. Secure the bottom of the bag to the lower bracket with the included 5/16" bolt along with a flat washer and lock washer. Apply a little Loctite and tighten to 8 ft. lbs.

10. That's it man you're ready to roll.

SOME TIPS:


1. Place heavy items in carefully. Throwing a disk lock or similar item into your bag can result in paint cracks on the outside.

2. Load heaviest items closest to the bike with lighter items outboard. This will keep the best balance and center of gravity possible.

3. As with all motorcycle luggage, pad delicate items to protect them from harm during transportation.

4. Watch that bag! Until they are used to them being there, many people kick the bags the first few times they throw a leg over the bike after installation. Try to remember your spiffy new bags are there so you won't be kicking yourself later for the scratches.

5. Most importantly... go have some fun and ride safely!

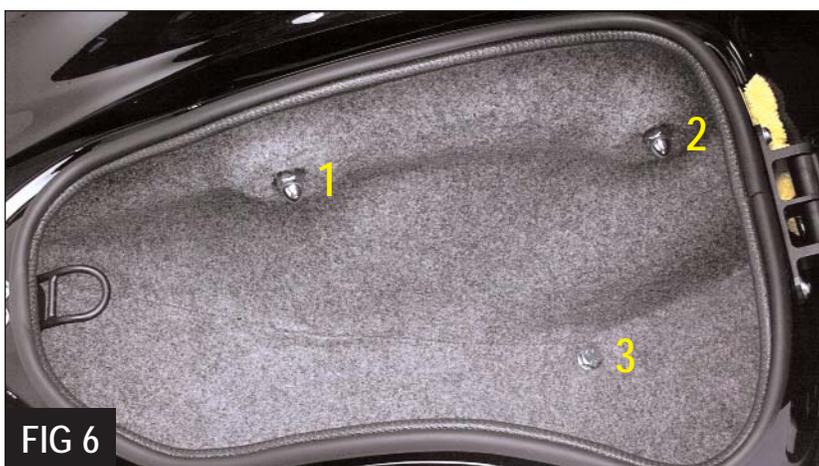

Questions? Give us a holler...
800-538-7035
tech@corbin.com