

**Part Number:** YVS137-YLNRFAIR

**Description:** Touring Fairing

**Fitment:** 2007 Yamaha V-Star 1300

**Revision:** 1




| Tools Required  | Parts List  |
|---|---|
| 5 mm Allen wrench<br>6 mm Allen wrench<br>17mm Socket or combination wrench | 1 #A00870 Left mount bracket<br>1 #A00871 Right mount bracket<br>2 10m x 20 x ?? Hex head bolts<br>2 3/8" Flat Washers<br>2 #P10469 Spacers<br>2 8m x 1.25 x 20m Chrome button head Allen bolts<br>6 5/16" Chrome washers<br>2 8m x 1.25 x 25 Chrome button head Allen bolts<br>2 8m x 1.25 x 40 Chrome button head Allen bolts |

**NOTE:** We recommend the use of Loctite® or other threadlock material when assembling parts on your motorcycle.

1. Fairing installation is simple and requires only that our brackets be installed onto your front end with two included bolts per side.

2. To install, remove caps from the triple tree, using a flat head screw driver (*Figure 1*).

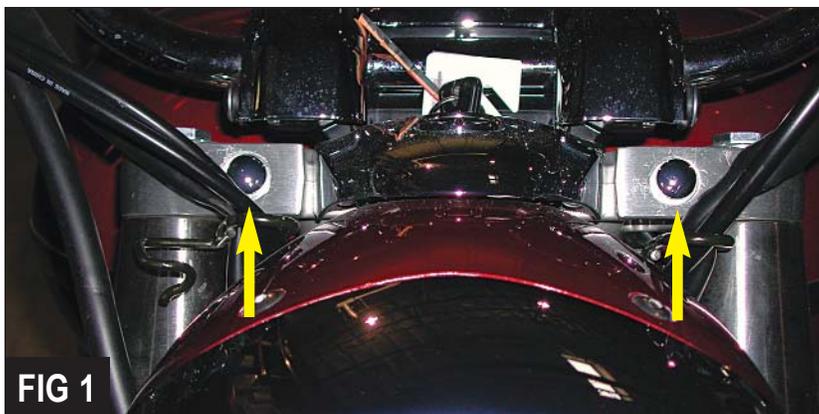

**NOTE:** These chrome caps are considered a one time use due to they are difficult to remove and often end up getting damaged.

3. Remove the turn signal cover by removing the two Allen screws as shown in *Figure 2*. Then pull out gently to release the plastic tip off the rubber grommet.



4. Remove the bolts from the turn signal using a 5mm Allen key (*Figure 3*).



**NOTE:** These bolts can prove to be a bit difficult to remove. Make sure you use a good Allen tip to prevent bolt from stripping.

5. To install the Corbin brackets, start by routing them around the cables (*Figure 4*). Secure the top position with the supplied 10mm hex head bolt, flat washer and place a spacer between the chassis and the bracket. At the lower position secure with the supplied chrome button head Allen bolt and flat washer (*Figure 5*). Tighten to 12 ft. lbs.



6. Repeat this procedure on the other side, then reinstall the chrome cover.

7. You are now ready to place the fairing and attach it to the brackets. You can most likely position the fairing and have it sit by itself while you bolt it on, but we think it's a good idea to have a friend help. Just to guard from scratching the new paint.

8. Secure the fairing to the bracket with a chrome button head bolt and flat washer at each of the four locations..

Use Loctite® on these bolts and tighten to 10 ft. lbs.

9. Assure that everything looks good with no pinched wires or crimped hoses and you're ready to go. Enjoy the ride!

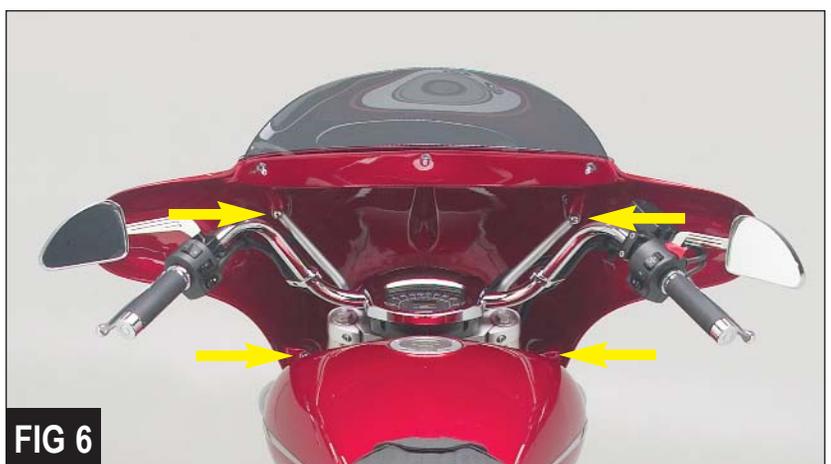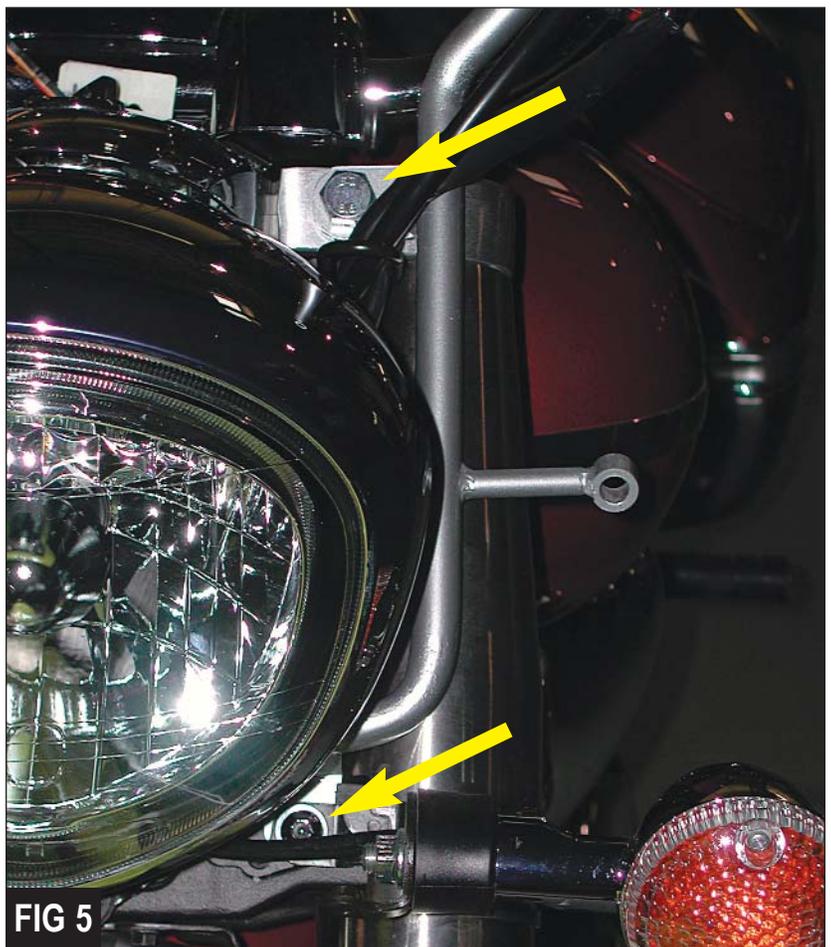

Questions? Give us a holler...  
**800-223-4332**  
[tech@corbin.com](mailto:tech@corbin.com)