

Part Number: BMW-GS13-SM(E)

Description: Supermoto Saddle

Fitment: 2024 BMW R 1300 GS

Revision: 1



Tools Required	Parts List
Wire Crimper Wire Cutters	5 Male connectors 5 Female connectors

1. Remove the stock seat(s) from your bike and disconnect the wiring harness on the front saddle (*Figures 1*). Refer to your owners manual if necessary.

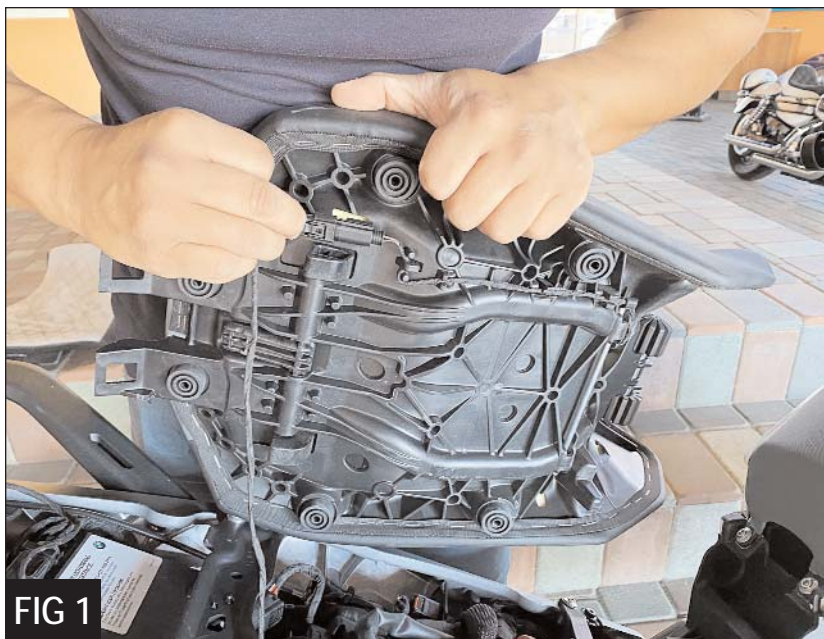


FIG 1

2. To install your Supermoto Saddle, simply slide the front tab of your saddle under the front seat mount at the rear of the gas tank, then lower the rear of the front seat down onto the chassis and push firmly on the passenger platform to latch (*Figure 2*).

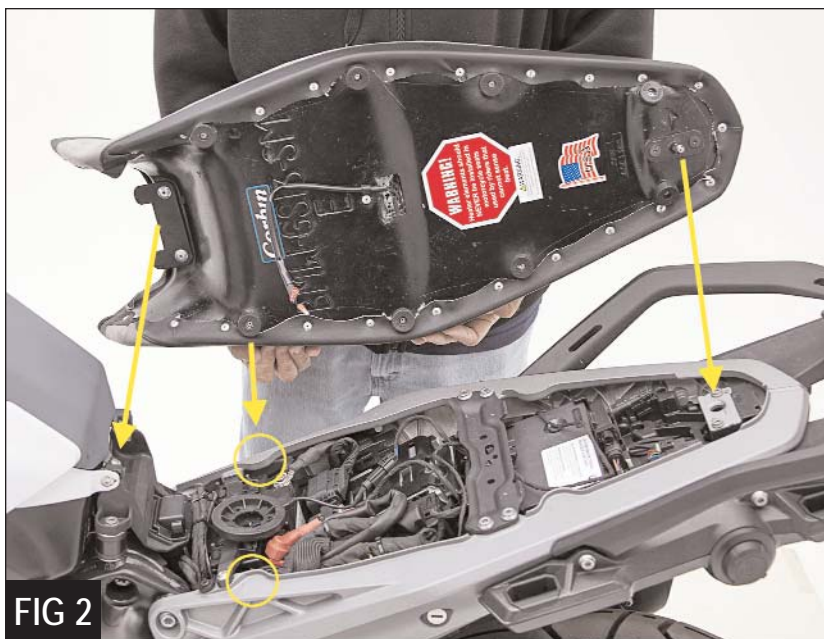


FIG 2

NOTE: Make sure the front bumpers sit in the frame pockets.

IMPORTANT! It has been brought to our attention that tapping the Corbin heater pigtail into the BMW wiring harness may effect your warranty. If you would rather obtain BMW connectors to plug into your stock harness, you can ask your dealer for the following part number: #61127688145. These connectors can be spliced to the Corbin pigtail and can then be plugged in like the OEM seat.




3. **Electric Heat Installation:** Start by cutting the stock front seat wiring harness in half, then trim 3" of tubing to expose the wires. (*Figure 3*)

4. For the front wiring harness, remove 1/2" of the plastic covering (*Figure 4*) from the brown wire, making sure to be careful to not cut through the wires, then twist the copper wires together, bend them over in half, then crimp the female connector onto it (*Figure 5*). Do the same to the purple wire, but crimp the male connector onto it. This should reflect the opposite as the Corbin seat wire connectors. (*Figure 6*).

6. Plug the BMW connectors to your stock harness.

7. Next you are going to connect the front BMW connectors to the front pigtail on the Corbin seat. Connect the purple wire on the Corbin seat to the BMW purple wire. Do the same with the brown wire.

NOTE: The heater operates on the dash controls.

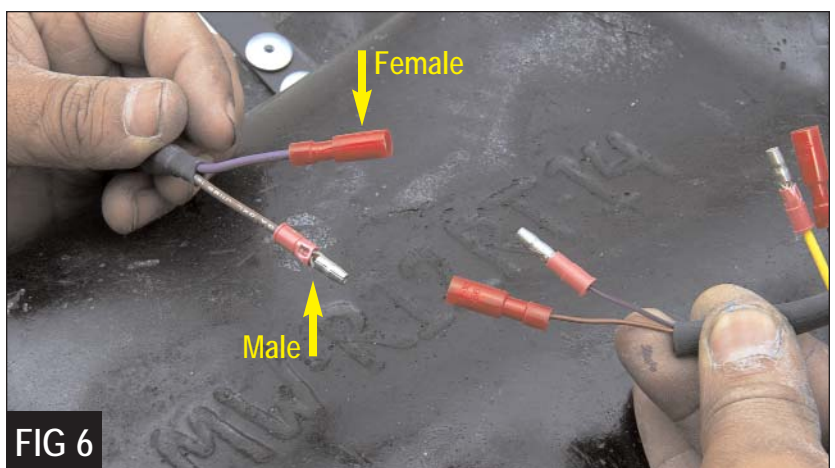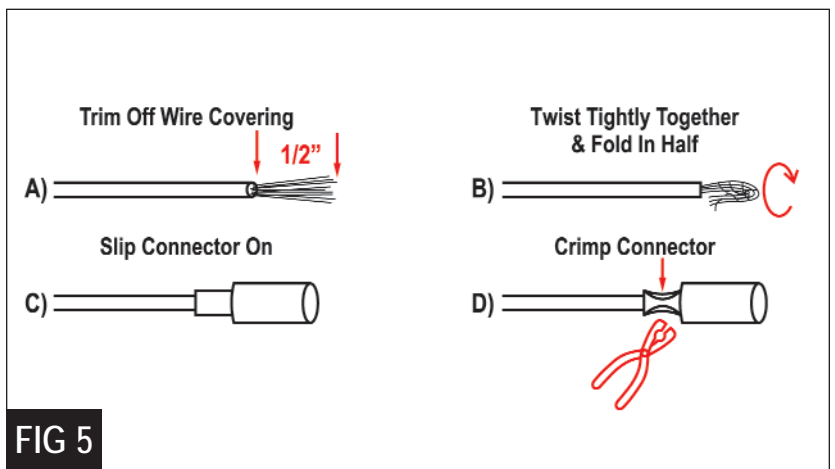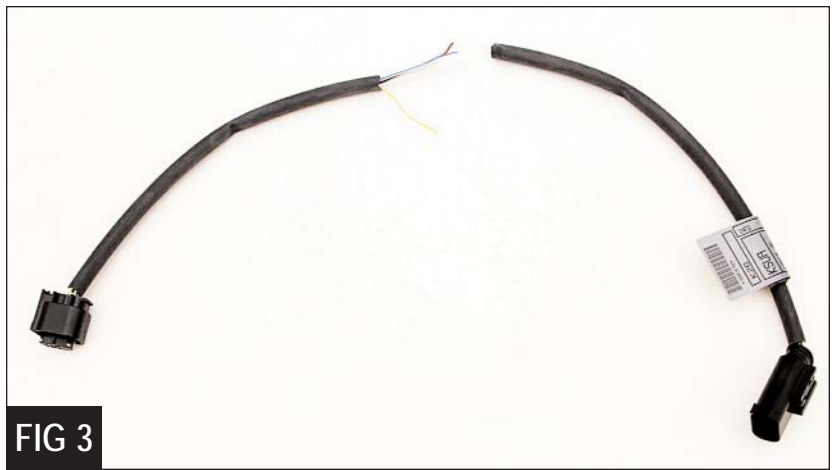

Questions? Give us a holler...
800-223-4332
tech@corbin.com