

Part Number: BMW-K16GTL-DT-E

Description: Dual Tour Saddle

Fitment: 2011 BMW K1600 GTL



Revision: 1



Tools Required	Parts List
T/20" Torx Wrench	1 #BMW-K16-LATCH PIN Billet mounting bracket

1. Remove the stock seat.
2. Remove the three bolts on the stock locking bracket. Remove bracket. *(Figure 1)*
3. Install the Corbin mounting bracket where you just removed the OEM bracket and bolts and secure using the stock bolts, making sure you are careful to not over tighten the bolts. *(Figure 2)*
4. Install your heated seat by first plugging the connectors together *(Figure 3)* and testing the switch for proper function.
5. To install your saddle, slip the front tab of your saddle under the front seat mount at the rear of the gas tank, align the rear Corbin bracket to the locking mechanism and push down on the saddle until you hear the lock click *(Figure 4)*.
6. To remove the saddle, use your stock key.

NOTE: The high/low heater for the rear seat is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

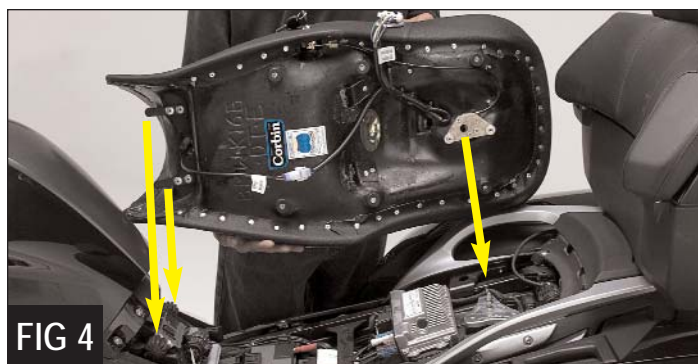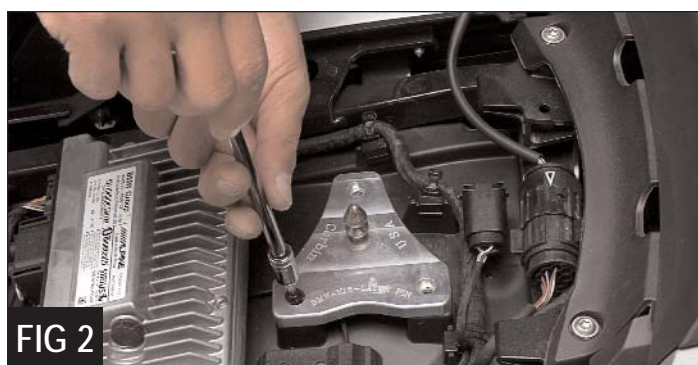

Questions? Give us a holler...
800-223-4332
tech@corbin.com