

Part Number: EB-T & EB-C

Description: Cruise & Commuter Saddles

Fitment: E-Bike Saddles with Mounting Hardware

Revision: 1



Tools Required	Parts List
6mm Allen Wrench 13mm Socket or Combination Wrench	

1. Remove stock seat with post.
2. Determine if you have the straight post or the angled post.
3. The straight post is used with the bracket already installed on the seat. Simply slide the post in (*Figure 1*), adjust the angle that best suits you (*Figure 2*), then use a 13mm combination wrench to secure (*Figure 3*).



4. If you have the angled post, you will need to remove the bracket from the spring assembly. Start by removing the nut from either side (*Figure 3*). Once loose, remove the nut and bolt (*Figure 4*), then pop out the bracket (*Figure 5*).



5. Next, you need to remove the post from your stock seat. Start by loosening the bolt with a 6mm Allen wrench (*Figure 6*). Don't remove the bolt, just loosen it. Once loose, turn the bottom piece 90 degrees, then slide it out the back (*Figure 7*).



NOTE: When re-assemble, all of the parts should line up (*Figure 8*). You can see how it will hold onto the rails on the Corbin bracket.

6. Slide the post onto the Corbin bracket (*Figure 9*), making sure the angled part of the post points to the rear of the seat. Align the bottom of the bracket, then secure the bolt in place (*Figure 10*). **DO NOT** tighten completely because you may need to adjust the angle of the seat.

NOTE: You can also adjust the seats position on the post front and back.

7. Install the seat with post onto the bike and snug up the collar on the post (Figure 11).





NOTE: You will want to adjust the angle, so your body sits back into the wide part of the saddle (Figure 12).

8. To adjust the angle of the saddle, loosen the bolt just enough to allow the "teeth" to clear, then reposition the post as needed (Figure 13). Tighten the bolt slightly and re-test fit.

9. Once you are satisfied with the fitment, take it back out and tighten the adjustment bolt.

10. Put the seat in place, make sure it's straight, then tighten up the collar (Figure 14).

Enjoy!

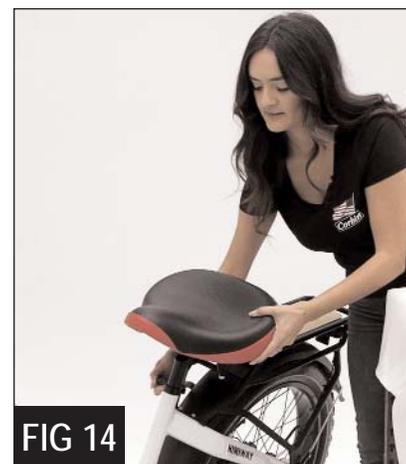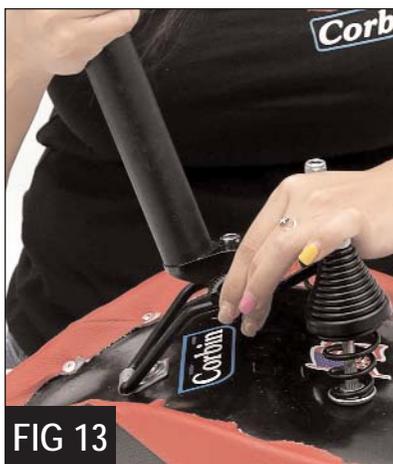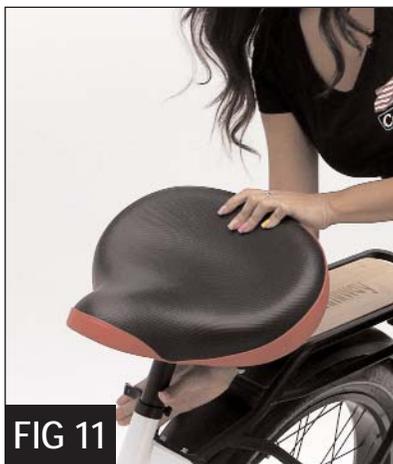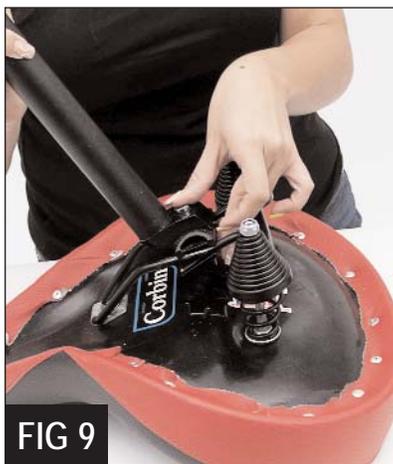

Questions? Give us a holler...
800-223-4332
tech@corbin.com