

Part Number: HD-PA-DT(E)
Description: Dual Tour Saddle
Fitment: 2021 Harley-Davidson Pan America
Revision: 1



Tools Required	Parts List
	1 Pan Wire Harness


1. Begin by removing your stock seat(s). Refer to your owners manual if necessary.
2. Saddle mounts just like stock with brackets preinstalled on the saddle.
3. To install your Dual Saddle, slip the front tongue of your saddle at the rear of the gas tank, align the rear Corbin latch pin on the saddle to the stock locking position (*Figure 1*) and push down on the saddle until you hear the lock click.



HEATER INSTALLATION:

1. If you ordered the heated model, we also included a wire harness that hooks into your OEM connector. So start by pulling out the wires from underneath the seat.

NOTE: Don't use the male / yellow connector (*Figure 2*).

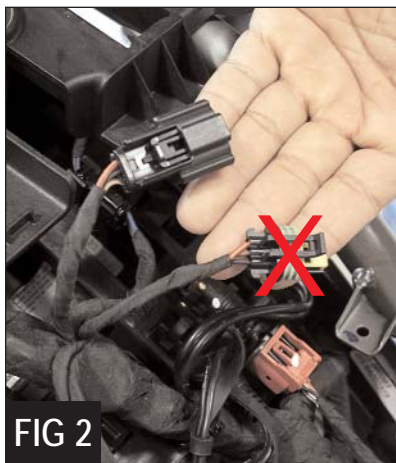


2. Plug the Corbin wire harness into the OEM connector (*Figure 3*).

3. Next, plug into the Corbin seat (*Figure 4*).

WARNING!

Heater elements should NEVER be installed in motorcycle seats used by riders that cannot sense heat.

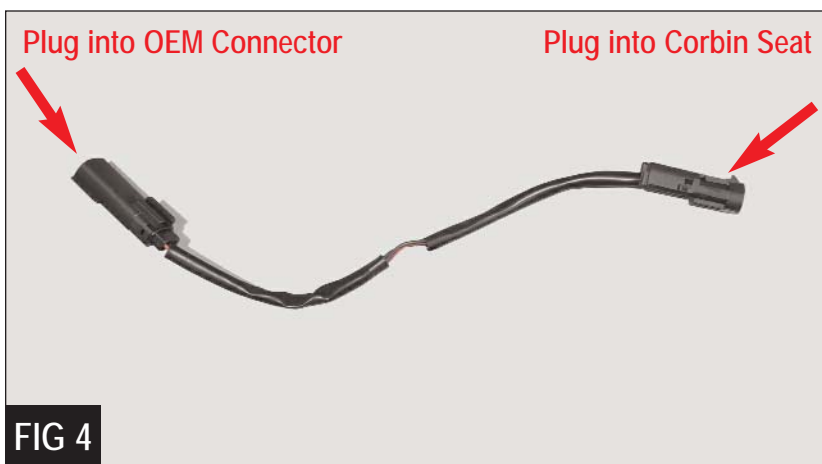

Questions? Give us a holler...
800-223-4332
 tech@corbin.com