

Part Number: HD-NR-G

Description: Gunfighter Saddle

Fitment: 2016 Harley-Davidson Night Rod Special

Revision: 1

Corbin

Tools Required	Parts List
10mm Socket or Open wrench 5mm Allen Key	1 A01279 Mounting latch plate 1 SP00292 m8 x 1.25-25mm Button head Allen bolt 1 SP00215 5/16" Flat washer 1 SP00860 5mm 0.8 x 12 Zinc hex head nut 1 SP00858 5mm Flat washer 1 SP00191 m6 Hex nut 1 SP00102 Flat washer

NOTE: We recommend the use of Loctite® or other threadlock compound when assembling parts on your motorcycle.

1. Open front seat.
2. Un-secure the rear seat by removing the nut and latch pin (*Figure 1*).
3. Remove the plastic clip on the stock seat (*Figure 2*).
4. Set aside the plastic clip because you will be reusing it later.
5. Next, slide front seat to rear and slide rear seat forward. Then slide seats back and out.

NOTE: You will not be reusing the latch pin.

6. Install the Corbin latch plate over the stud where you removed the latch pin (*Figure 3*), then secure the top position with the provided flat washer and Allen bolt, using a 5mm Allen key and secure the bottom position with the provided flat washer and hex nut, using a 10mm socket or combination wrench (*Figure 4*).

7. Slide the Corbin seat in place where you removed the front seat and secure with the stock plastic clip.



FIG 1



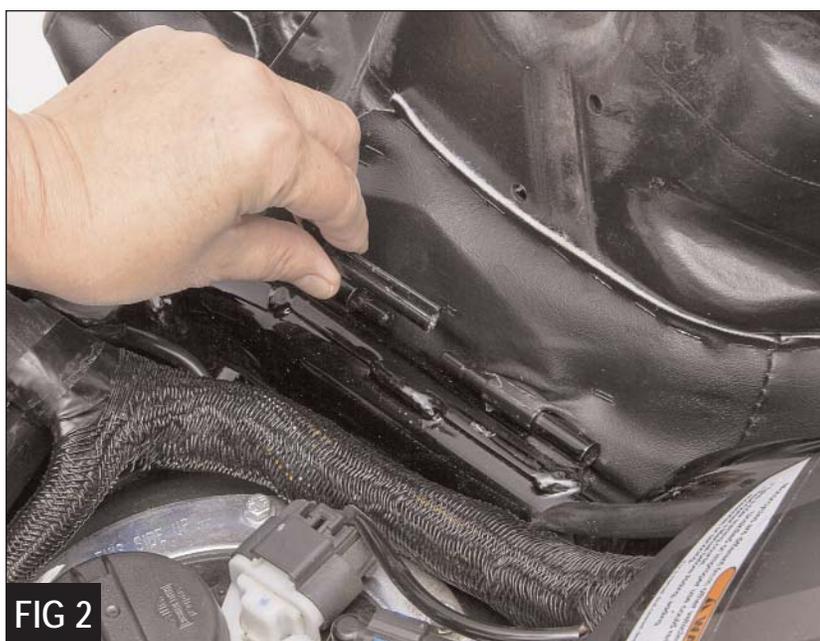


FIG 2

8. Attach the cable on the saddle to the frame, where the stock nut was previously removed and secure with the provided flat washer and hex nut, using a 10mm socket or combination wrench (Figure 5).

9. Hinge saddle down to secure. Slight adjustment is possible.

10. Use provided key to release.

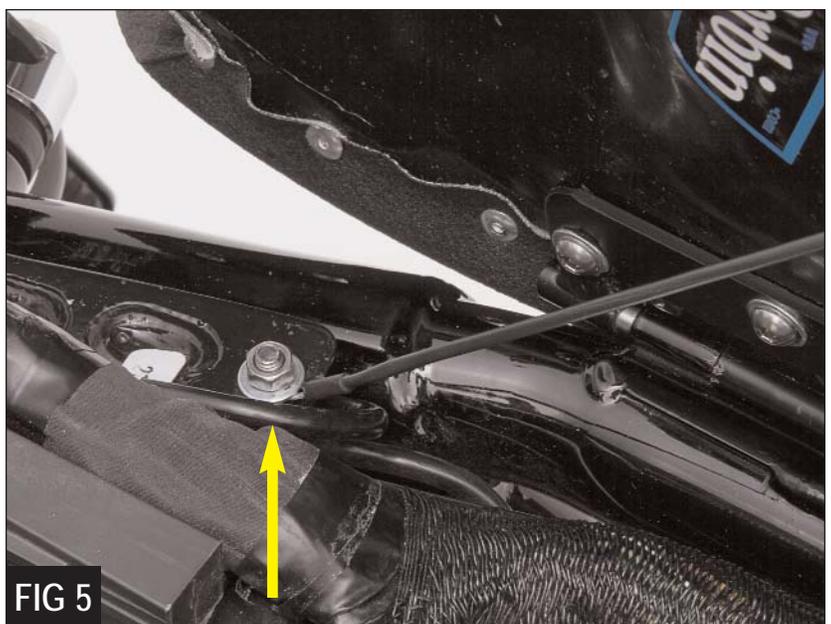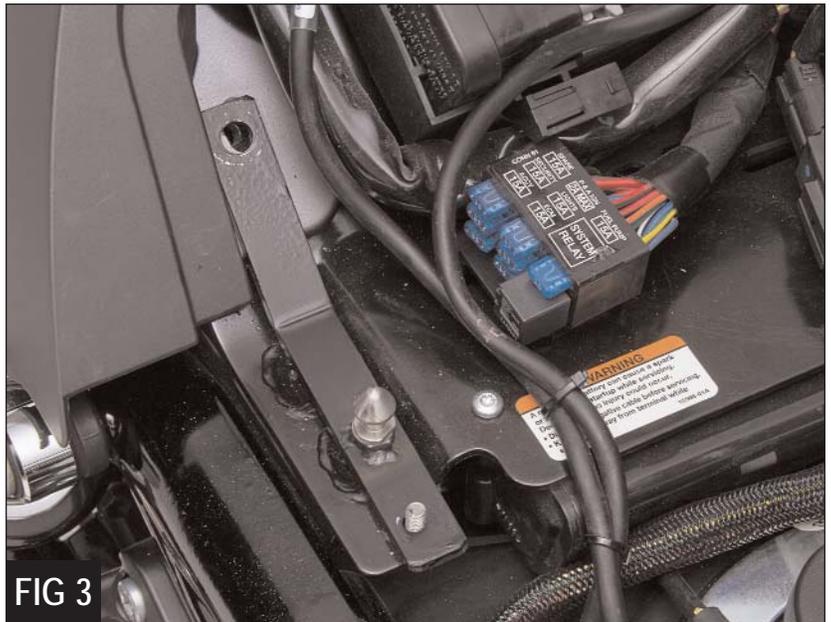

Questions? Give us a holler...
800-223-4332
tech@corbin.com