

Part Number: H-18-GW-E & H-18-GW-FI & H-18-GW-TR-E

Description: Master's Type Saddle

Fitment: 2018 Honda Goldwing 1800

Revision: 2



Tools Required	Parts List
5mm Allen Wrench 14mm Socket Wrench Phillips Head Screwdriver	1 Wiring Harness 2 #SP00136 m8 x 20 Allen Head Button Bolts 2 #SP00215 5/16" Flat Washers 3 #SP00144 6mm x 25mm Hex Bolts 3 #SP01080 6mm Flat Washers 3 Zip Tie

SADDLE AND TRUNK REST INSTALLATION:

1. Remove your stock seat. To do this, start by opening the saddlebags (*Figure 1*) and lower the passenger foot pegs.

2. Remove the side covers by pulling out from the bottom then rotate up to clear the seat (*Figure 2*).

3. Remove the stock 8mm bolt from the front of the seat, using a 5mm Allen wrench (*Figure 3*).

4. Repeat on the other side.

5. Remove trunk rest. Refer to your owner's manual if necessary.

6. Using a phillips screwdriver, connect the negative wire on the Corbin pigtail (black) to the negative accessory terminal, then connect the positive wire with inline fuse to the positive accessory terminal (red). *Figure 4*

7. Route the wiring harness under the subframe and zip tie the excess wire (*Figure 5*).

8. Plug the wiring harness you just installed on the bike into the plug on the Corbin seat.



FIG 1



FIG 2


9. Once you determined the heater is working properly, slip the rear tabs on your saddle under the rear mounting slots on your bike, then lower the front of the saddle into place and secure with the stock bolts.

10. To install your trunk rest, you need to route the plug behind the plastic panel and secure with the provided 6mm hex bolts and flat washers. Next, plug the trunk rest into the seat plug.

NOTE: Start both bolts before you tighten to allow easier installation

11. Replace the side covers.

NOTE: Corbin's heated saddle will shut off when your bike isn't in use.

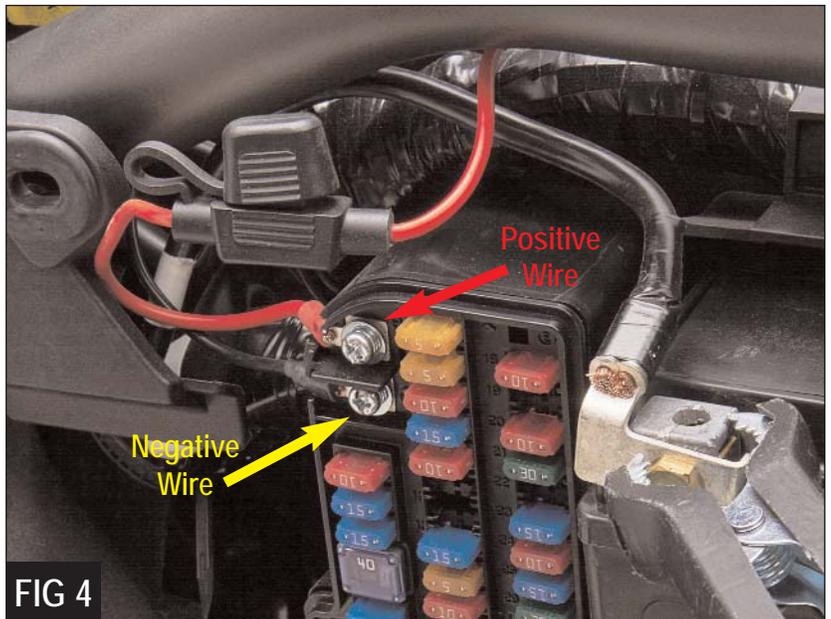

Questions? Give us a call!
800-223-4332
daytona@corbin.com