

**Part Number:** H-V14-BAG

**Description:** Fleetliner Saddlebags

**Fitment:** 2014 Honda Valkyrie

**Revision:** 3




Tools Required	Parts List	
Flathead screwdriver	1 #A01216 Right mounting bracket	1 #SP00852 m10 x 1.5 Hex head bolts
Phillips screwdriver	1 #A01215 Left mounting bracket	1 #SP00265 10mm Flat washers
6mm Allen wrench	1 #A01214 Bottom mounting bracket	2 #SP00761 m8 x 1.25 x 60 Hex head bolts
2 12mm open wrenches	4 #SP00121 3/8"-16 Hex head bolts	2 #P10470 Aluminum Spacers
14mm combination wrench	4 #SP00198 3/8" Chrome Acorn nuts	
14mm open wrench	10 #SP00157 3/8" Lock washers	
10mm socket wrench	12 #SP00215 3/8" Flat washers	
	4 #SP00167 5/16"-24 Flat washers	
	4 #SP00104 m6 x 16mm Hex head bolts	
	2 #SP00845 m8 x 30 Hex head bolts	

1. Remove your stock seat.
2. Pull off side covers on both sides of the bike.
3. Using a flathead screwdriver, remove the plastic caps on the handrails (*Figure 1*).
4. Remove the bolts on the handrails, using a 6mm Allen wrench (*Figure 2*). Do not lose the washers.




**NOTE:** Hold handrail while removing the bolts.

5. Remove bolts on the fender, using a Phillips screwdriver (*Figure 3*).
6. Push in plastic rivets on the plastic splash guard, then pull out (*Figure 4*).
7. Pull out plastic rivets under the rear of the fender on both sides (*Figure 5*).

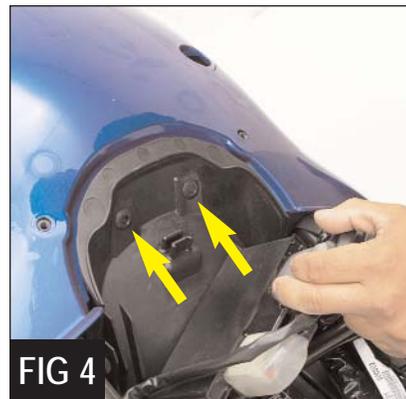

8. Lift up on the fender to clear the seat mounting points and pull off (*Figure 6*).
9. Starting on the right side, remove the nut and bolt on the muffler hanger, using two 12mm open wrenches (*Figure 7*).
10. Remove the nut and bolt on the lower subframe, using a 14mm combination and a 14mm socket wrench (*Figure 8*).

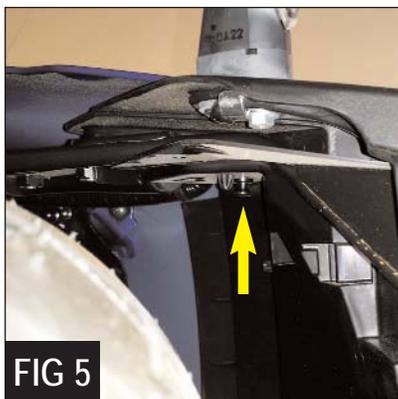

11. Remove the two 6mm bolts on the subframe, using a 10mm socket wrench (*Figure 9*).

12. Install the Corbin right bag bracket and secure the top of the subframe with the supplied m6 x 16mm hex head bolt and 5/16" flat washers. Secure the lower subframe with the supplied m10 x 1.5 hex head bolt and 10mm flat washer. Secure the muffler hanger with the supplied m8 x 1.25 x 60 hex head bolt, 3/8" flat washer and aluminum spacer (*Figure 10*). Don't forget to use Loctite®.





13. On the left side of the bike, remove the nut on the muffler hanger, using two 12mm open wrenches (*Figure 11*) and then remove the two 6mm bolts on the subframe (*Figure 12*), using a 10mm socket wrench.

14. Install the Corbin left bag bracket and secure the top of the subframe with the supplied m6 x 16mm hex head bolt and 5/16" flat washers, then secure the muffler hanger with the supplied m8 x 1.25 x 60 hex head bolt, 3/8" flat washer and aluminum spacer (*Figure 13*). Don't forget to use Loctite®.

15. Reinstall the fender, handrails, side covers and seat.

16. Install the saddlebags by lining up the holes in the bags to the mounting points on the bracket. Secure the upper mounting points with the supplied 3/8" washer, lock washer and acorn nut, using a 3/8" socket wrench. Secure the bottom mounting points with the supplied 3/8" washer, lock washer and hex head bolts.

17. Install the bottom bag bracket and secure with the supplied m8 x 30 hex head bolts, 3/8" lock washers and 3/8" flat washers (*Figure 14*), using a 13mm socket wrench.

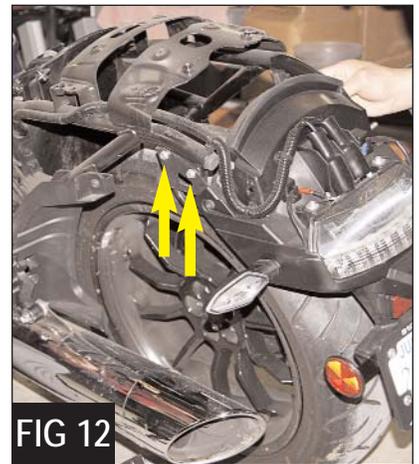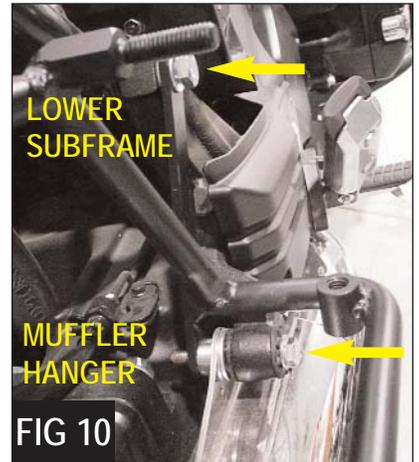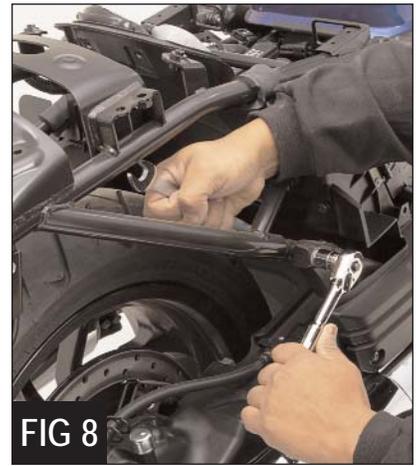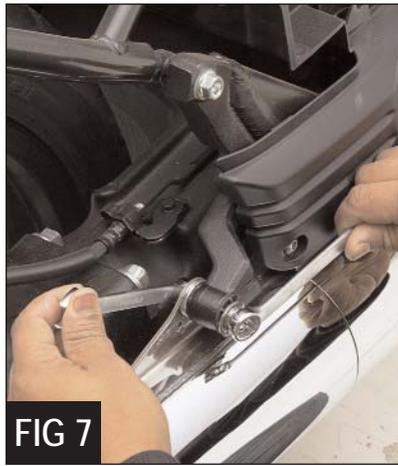

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com