

Part Number: I-S-25-B

Description: Brave Saddle

Fitment: 2025 Indian Scout

Revision: 1



Tools Required	Parts List
5mm Allen Wrench	1 #A01384 Front Seat Mounting Bracket 2 #SP00215 5/16" Flat Washer 2 #SP00973 m8 x 40 Allen Bolts

1. Begin by removing your stock seat(s). Refer to your owners manual if necessary.

2. Remove the rear mounting bolt, using a 5mm Allen wrench (*Figures 1 & 2*).

5. Install the front bracket and secure with the 5/16" flat washers and m8 x 40 Allen bolts, using a 5mm Allen wrench (*Figure 3*).

6. To install your new Corbin saddle, start by sliding the two front tabs under the front mounting bracket you just installed, then lower the rear of the saddle, line up rear bracket to the hole in the fender, then secure with the stock bolt or use one of our machined stainless steel thumbscrews. (*Figure 4*)

Enjoy your new saddle!



FIG 1

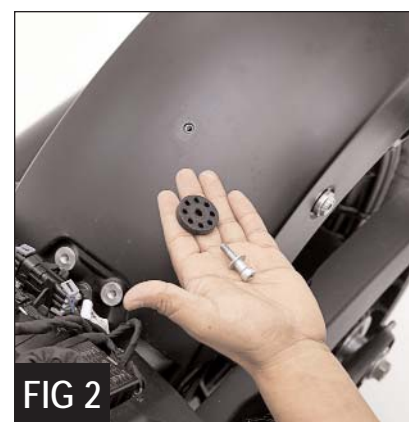


FIG 2



FIG 3

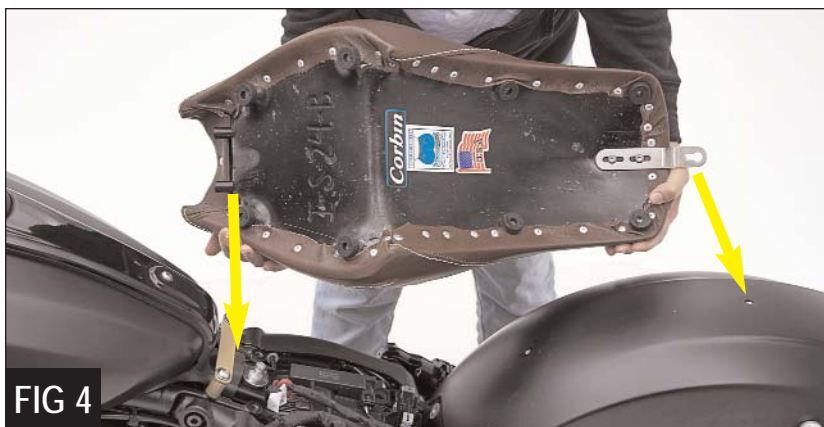


FIG 4

Questions? Give us a holler...
800-223-4332
tech@corbin.com

I-S-25-B

SEND w/ seat

SP00215	5/16 flat washer
QTY (6)	zinc finish



SP00973	8m x 40m allen bolt
QTY (2)	zinc finish



A01384	Mounting bracket
QTY (1)	black finish



P00546	rear seat tab
QTY (1)	chrome finish

