

**Part Number:** T-TBC-14-FAIR

**Description:** Fleetliner Fairing

**Fitment:** 2014-2015 Triumph Thunderbird Commander

**Revision:** 1



Tools Required	Parts List
15mm open wrench 6mm Allen wrench 5mm Allen wrench 4mm Allen wrench Loctite® or similar thread lock. <b>REMOVABLE STRENGTH</b>	1 #A01217 Corbin top bracket 1 #A01218 Corbin right side bracket 1 #A01219 Corbin left side bracket 2 #P11100 Headlight spacers 4 m8 x 40 Allen bolts 2 m8 x 20 Allen bolts 2 6mm Allen bolts 2 6mm Flat washers 10 8mm Flat washers 4 8mm x 40 x 1.25 chrome Allen bolts

**NOTE:** Cover the tank and fender to help prevent from scratching.

**NOTE:** It may also be helpful to have a second set of hands to help hold the fairing in position during the last step.

**NOTE:** We highly recommend using a removable strength thread lock product, such as Loctite® blue, on the bolts when installing your fairing.

**NOTE:** Before removing your headlights, have your bike upright, turn on the headlights and mark the wall where the lights hit. After mounting the headlights onto the extensions, turn on the headlights and realign, then tighten.

1. Using a 6mm Allen wrench, remove the two bolts on the triple clamp cover (*Figure 1*).

2. Install Corbin's center bracket, making sure the longer barrel goes towards the bike (*Figure 2*), securing with the supplied m8 x 40 Allen bolts and 8mm flat washer (*Figure 3*). Snug the bolts, do not tighten yet and use Loctite®.

3. On both sides of the headlight trim, remove the the bottom bolt and loosen the top bolt, using a 5mm Allen wrench (*Figure 4*).



4. Remove the front cover below the headlights, using a 5mm Allen wrench (*Figure 5*).

5. Remove the bolts on the headlights, using a 6mm Allen wrench on the bolt and a 15mm open wrench on the flanged nut, being careful not to lose the flanged nut. (*Figure 6*).

6. Carefully pull out the headlights (*Figure 7*).

7. Install the headlight extensions and secure with the same bolts and flanged nuts you just removed from the headlights (*Figure 8*).

8. Mount the headlights onto the extensions and secure with the supplied m8 x 40 Allen bolts and 8mm flat washers. Readjust headlights and don't forget to use Loctite®.


9. Install the right mounting bracket, using a 6mm Allen bolt and 6mm flat washer in the bottom position (*Figure 9*) and a m8 x 20 Allen bolt and 8mm flat washer in the top position (*Figure 10*). Snug the bolts, do not tighten yet.

10. Repeat on the other side.

11. Install the fairing by securing it with the supplied 8mm Allen bolts and 8mm flat washers in each of the four positions (*Figure 11*). Don't forget to use Loctite®.

12. Go back and tighten all the bolts.

13. Reinstall the center bracket.

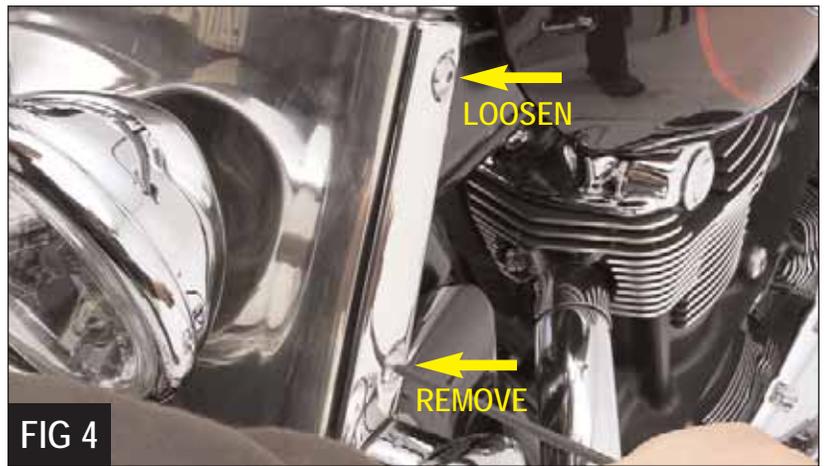

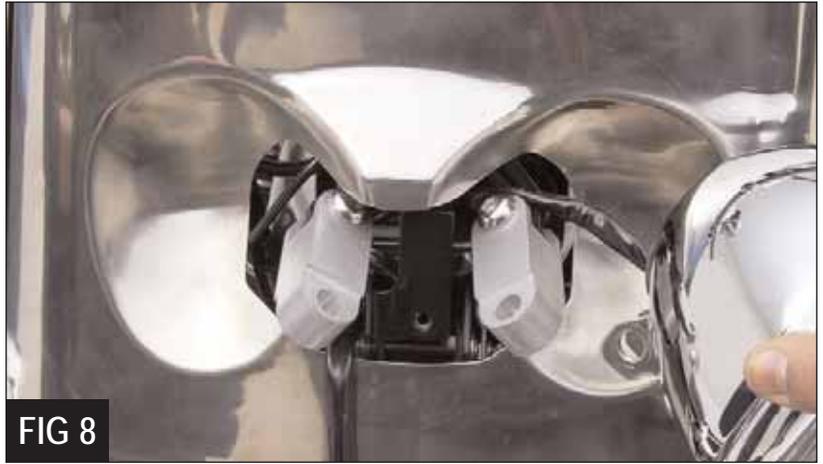


FIG 8



FIG 9



FIG 10

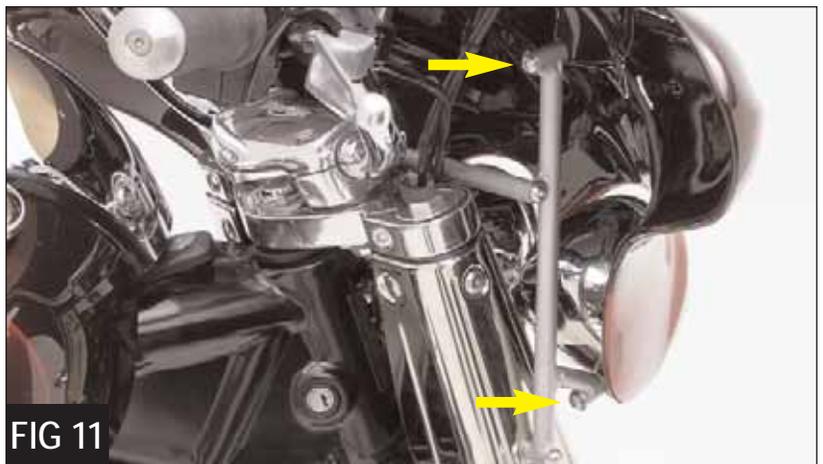


FIG 11

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com