

**Part Number:** Z-SRF-20(E) & Z-SRS-20(E)

**Description:** Heated Gunfighter Saddle

**Fitment:** 2020 Zero SR/F & SR/S

**Revision:** 1

**Corbin**

Tools Required	Parts List
T-25 Torx Wrench T-30 Torx Wrench	1 Wiring Harness

1. Start by removing the stock rear seat using the OEM key.

2. Remove the bolt on the stock front seat, using a T-30 torx wrench.

3. Locate the accessory jack and pull it out from the fabric wrap (Figure 1). Refer to owner's manual if necessary.



FIG 1

4. Unbolt side cover (Figure 2).

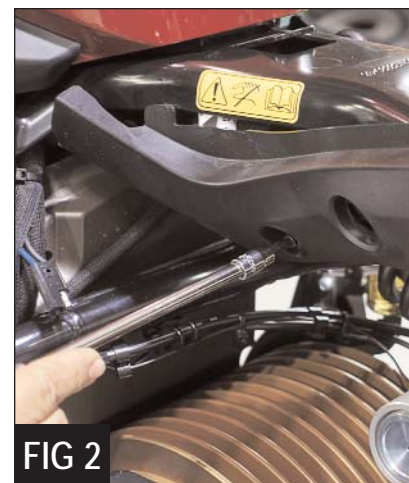


FIG 2

5. Route the Corbin pigtail under the frame and down behind the side cover and out towards the accessory jack (Figure 3).



FIG 3

6. Connect the Corbin pigtail to the accessory jack.

7. Plug the wiring pigtail on the Corbin saddle into the wiring harness you just installed. Flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

8. Re-bolt side cover.

9. To install your Gunfighter Saddle, slip the front tongue of your saddle at the rear of the gas tank, align the Corbin latch pin to the stock bracket and push down on the saddle until you hear the lock click (Figure 4).



FIG 4

Questions? Give us a holler...

**800-223-4332**  
**tech@corbin.com**