

**Part Number:** K-MS-FLIP & K-MS-FLIP-E

**Description:** Heated Rumble Seat

**Fitment:** Kawasaki Vulcan Mean Streak & Suzuki Marauder 1600

**Revision:** 1



Tools Required	Parts List
Phillips Screwdriver 7/16 Open Wrench Blade to cut zip tie	1 #FACC-07 Large Fuse Adapter 1 #Ph-CB-HL Wiring Harness 1 # FUSE B-L Large Waterproof Cover 1 #P00676 Latch Pin 1 #P00790 Nylon Cover 1 6mm x 1.0 Nylock Nut 1 6mm Flat Washer 2 8" zip ties

1. Remove Stock seat

2. Install stainless steel latch pin into fender along with 1/4" flat washer. Leave the nylock nut threaded onto the underside of the stud, inside the black plastic cap. Tighten securely. *Figure 1*

3. If your saddle does not have electric heat, you are ready to mount the saddle. Proceed to step 14.

4. Remove the negative lead from your battery and leave off for now.

5. Remove the right side cover by taking out the phillips head screw under the cover and pulling loose from the two rubber gromets. Refer to your owners manual if needed. *Figure 2*

6. Open the fusebox and pull the Accessory fuse and put it into the Corbin fuse adapter pigtail.

7. Insert the adapter into the fusebox as shown and run the wire up under the frame. *Figure 3*

8. The fusebox cover won't re-install with the adapter in place. You can loosely put it back into place for storage or leave it completely off and stow it off the bike.

9. Use the Corbin cover over the fusebox as shown in *Figure 4*.

10. Attach the ground wire to the battery negative terminal and reinstall. *Figure 5*



11. Bundle up any excess wiring as shown in *Figure 6*, leaving roughly a 5 - 6 inch pigtail free off the bike. Secure gently with the included zip ties.

12. You are now ready to install the Rumble Seat. Simply connect the pigtail on the saddle with the one on the bike. Notice this connection only works one way. *Figure 7*

13. Set the seat in position and test the heater by turning your ignition switch on and moving the left side mounted heater switch on the saddle to either the high or low position. If switch illuminates, heater is working.

14. Slide the nose of the saddle into position with the tongue engaging the chassis at the nose. Lower the rear of the saddle onto the latch pin and push down until you hear two clicks.

15. To remove the saddle, just insert the key into the side of the saddle, push down on the rear of the seat in order to remove any tension from the latch and turn the key.

16. Enjoy the ride!



FIG 4

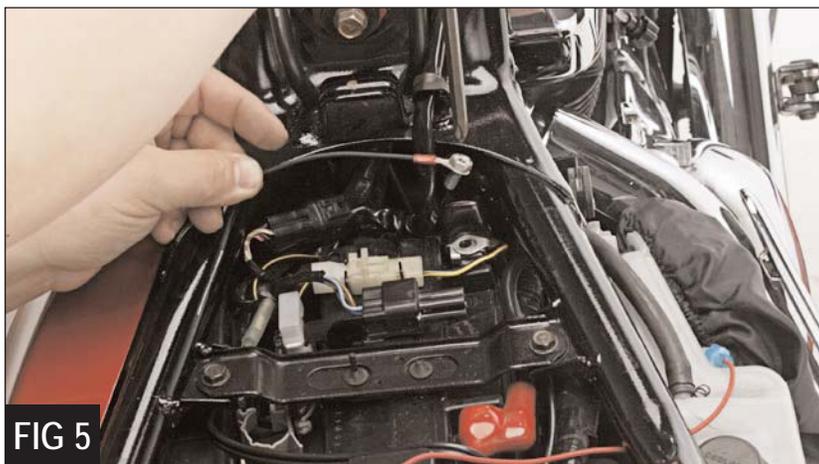


FIG 5

#### SURFACE TEMPERATURE PERFORMANCE

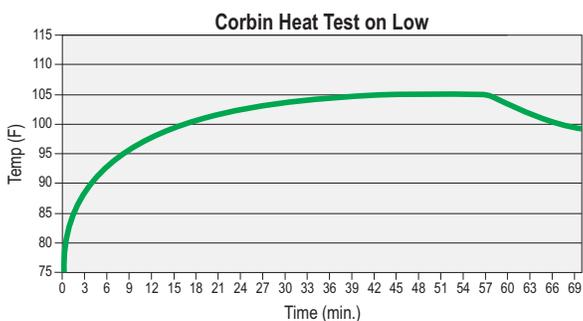
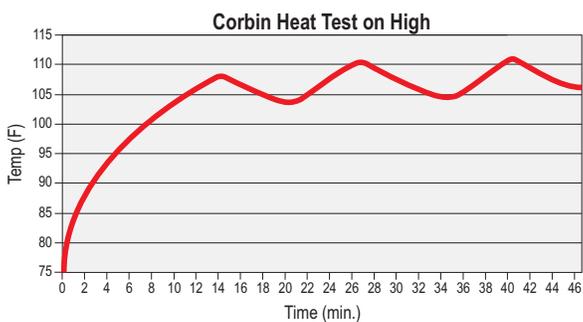


FIG 6

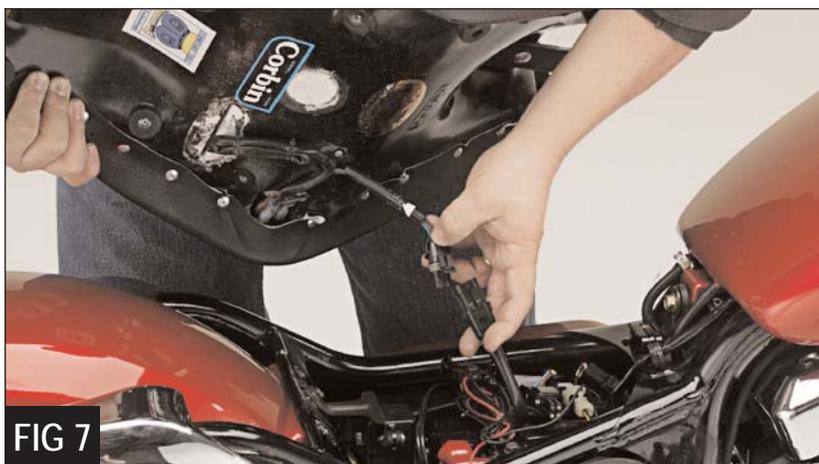


FIG 7

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com