**Part Number:** A-SHV-G
**Description:** Gunfighter Saddle
**Fitment:** 2008+ Aprilia Shiver
**Revision:** 1

| Tools Required | Parts List |
|---|---|
| 8mm Socket Wrench | 1 #A01101 Mounting Bracket |
| 10mm Socket Wrench | 2 8mm Hex Head Bolts |
| 13mm Socket Wrench | 2 8mm Flat Washers |
| 13mm Combination Wrench | |
| 9/64” Allen Wrench | |
| Phillips Screwdriver | |
| Loctite® or similar thread lock. REMOVABLE STRENGTH | |

Start by removing your stock seat. Refer to your owner’s manual if necessary.

1. Remove the two screws on the plastic cover, using a phillips screwdriver *(Figure 1).*

2. Disconnect the taillight and blinkers *(Figure 2).*

3. Pull up the fuse box *(Figure 3)*.

4. Next we are going to remove the grab rail. To do this, remove the 2 front bolts, using a 13mm socket wrench and a open wrench *(Figure 4).*

5. Remove the 2 middle bolts, using a 10mm socket wrench *(Figure 5)*.

6. Support your taillight and remove the 2 rear bolts with an 9/64” Allen wrench *(Figure 6)*.

7. Remove the grab rail.

8. Install the Corbin bracket, making sure the notched side is up and on the right. Secure with the stock screws. *(Figure 7)*. Use Loctite® on the nuts and on the front bolts.

9. Secure the taillight with the supplied 8mm hex head bolts and flat washers *(Figure 8)*.

FIG 1

FIG 2

FIG 3

10. Plug the taillight and blinkers back in, put the fuse box back into place and re-install the plastic cover.

11. To mount the seat, slip the two front prongs into the base of the gas tank, align the lock in the rear and push down.

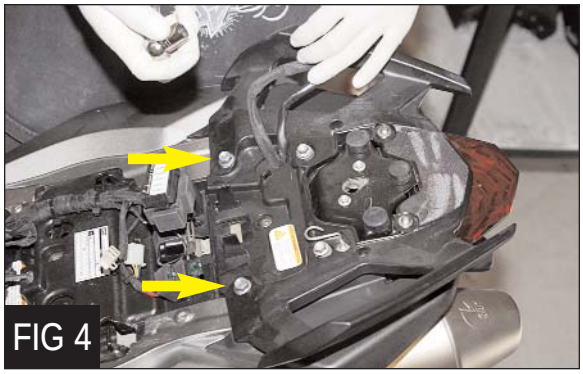
FIG 4

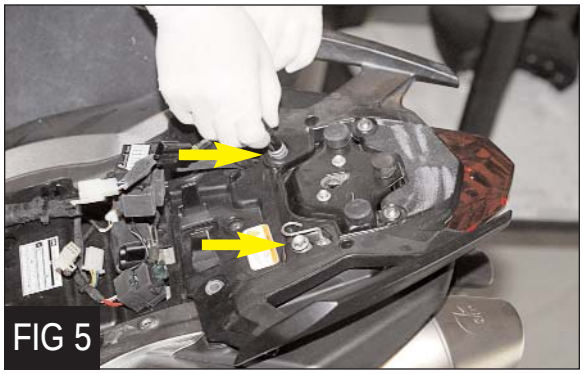
FIG 5

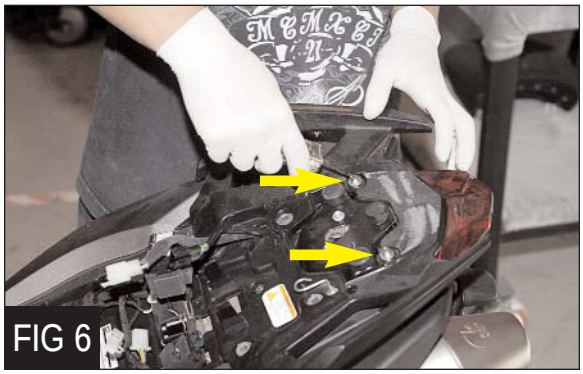
FIG 6

FIG 7

FIG 8

800-223-4332
tech@corbin.com